USER MANUAL

SR-H320

1,Welcome screen

Open the equipment total power switch, the screen displays a welcome interface, as shown in picture 1.

（pic 1）

2, Enter the system

(1) Press the upper left corner of the button into the main system interface, as shown in picture 2.

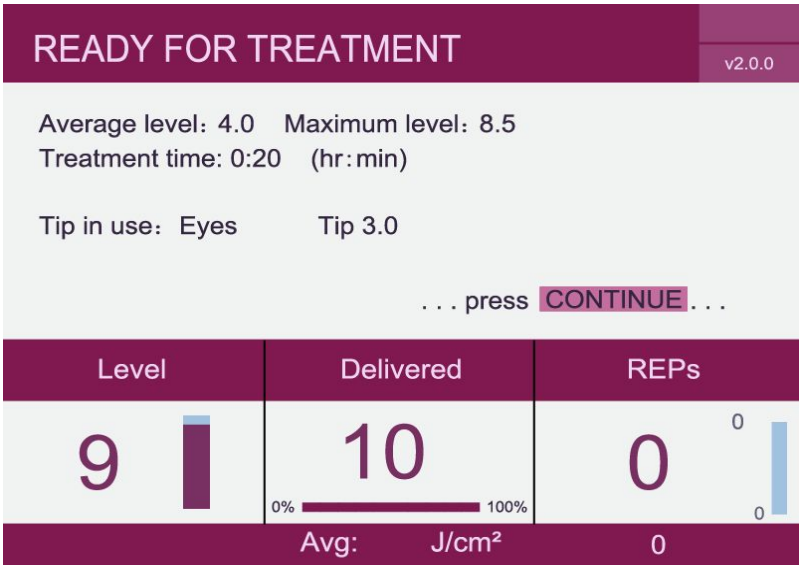

（pic 2）

(2)Press the start button again which on the left upper of the panel, interface jump as shown in picture 3. The user can choose to press the energy adjustment buttons again on the right side of interface to set the treatment time. The system default treatment time for 40 min,the highest treatment time can be set up for 60 min. Each time you press the button, increasing time at 5 minutes intervals such as 5, 10, 15.....

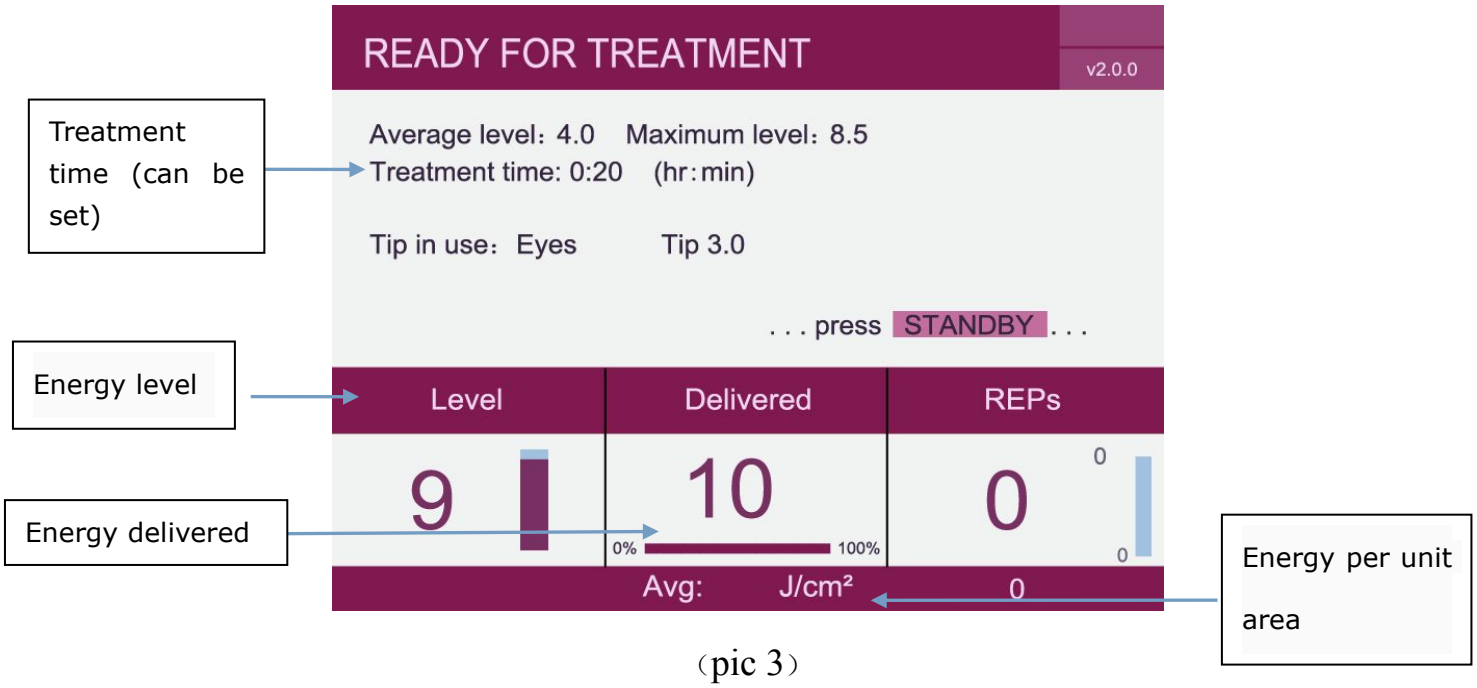

（pic 3）

Treatment time: show the current treatment duration and time can be set

Energy Level: Shows energy output level of present treatment head, maximum is 10 and minimum is 0.5. If you rotate the rotary button clockwise, 0.5 level increase. If you rotate anticlockwise, 0.5 level reduce.

Energy Delivered: Shows the present output energy. When you adjust the energy level, energy changed. When energy level is 0.5, energy output is 2.6; When energy level is 10, energy output is 52.

Avg.Energy: Shows the avg. Energy of present treatment head. When you adjust energy level, avg.energy chaged.

The following table shows the changes of level, delivered and avg.

Level	Delivered	Avg. (J/cm^2)
0.5	2.6	2.1
1.0	5.2	4.2
1.5	7.8	6.3
2.0	10.4	8.4
2.5	13.0	10.5
3.0	15.6	12.6
3.5	18.2	14.7
4.0	20.8	16.8
4.5	23.4	18.9
5.0	26.0	21.0
5.5	28.6	23.1
6.0	31.2	25.2
6.5	33.8	27.3
7.0	36.4	29.4
7.5	39.0	31.5
8.0	41.6	33.6
8.5	44.2	35.7
9.0	46.8	37.8
9.5	49.4	39.9
10.0	52.0	42.0

（3）push the device on the upper left corner of the start again, interface jump as shown in figure 4.

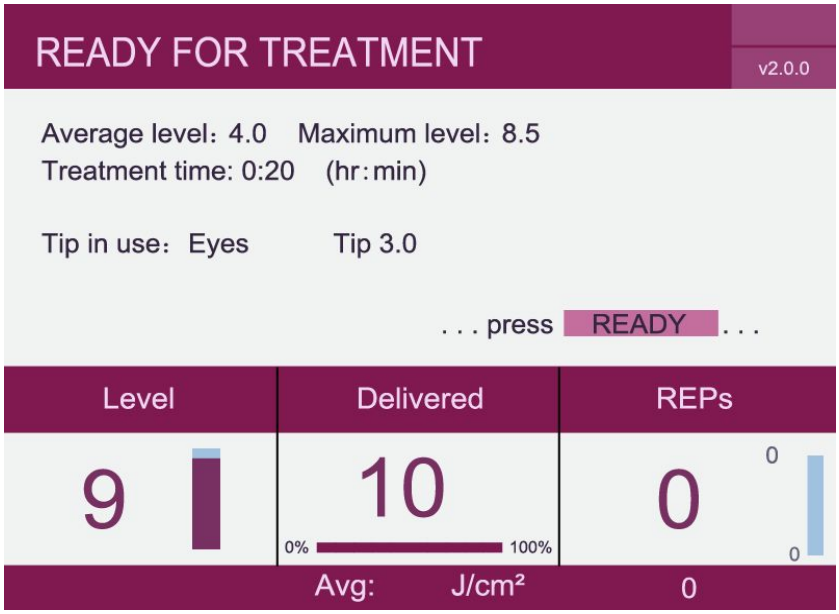

（pic 4）

Handle to the output energy at this time，press the“ ”key，Can reduce the energy output，press the“ ”key，Can increase energy output.

3、The alarm unit

When equipment is started, if the handle is not installed on the treatment ,the red light flashing on the device and a "di", "di", "di" sound the alarm , install treatment head at this time, cancel the alarm .